

Naval Facilities Engineering Command

200 Stovall Street
Alexandria, Virginia 22332-2300

APPROVED FOR PUBLIC RELEASE




NAVFAC MO-102.6

ASPHALT CRACK REPAIR

FIELD MANUAL

MAY 1990

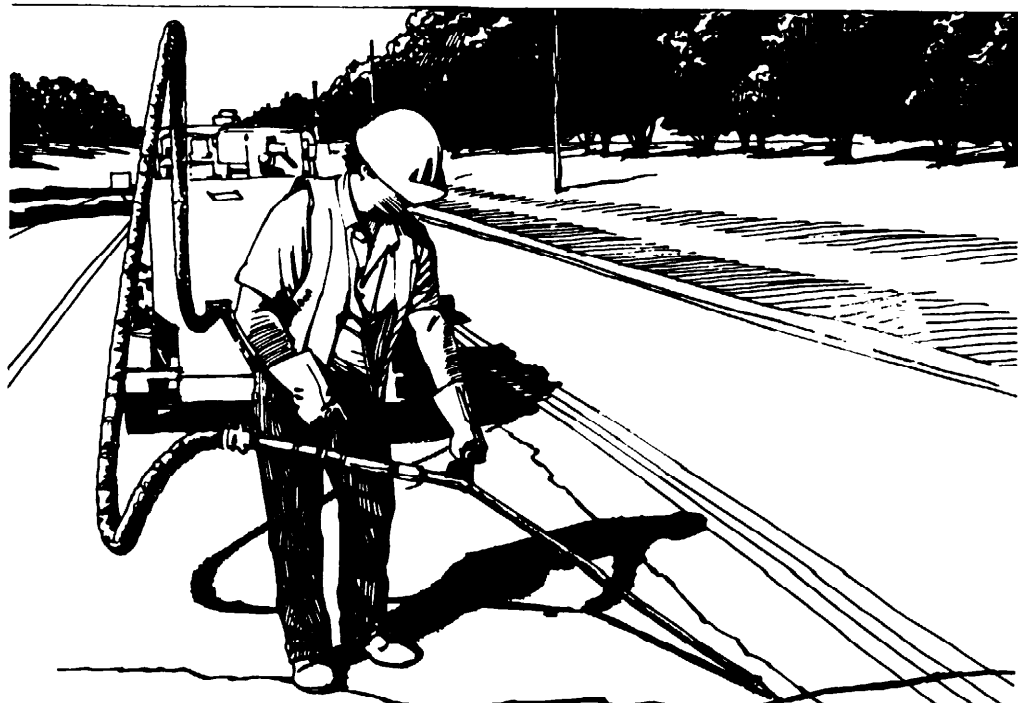

SNDL DISTRIBUTION:

(25 copies each):

FKA1C COMNAVFACENGCOM

FKNI EFDS

(10 copies each):

FA46 PWC LANT
FB54 PWC PAC

FT104 PWC CNET

(2 Copies each):

HQ U.S. AIR FORCE
Engineering And Services Center
Tyndall AFB, FL 32403

U. S. ARMY
Office Chief of Engineers
Washington, D.C. 20314 (DAEN-MPO)

FKN7 NEESA
FKP1B WPNSTAs
FKP1J NAVORDSTAs
FKP7 NAVSHIPYDs

FT18 CBU
FT28 NETC
FT31 NTC

(1 Copy each):

23C NAVRESFORDET
24G SUFORCOM
26B NAVSRESFORDET
E3A LABONR
E3C NORDA
FA7 NAVSTALANT
FA10 SUBASELANT
FA13 NAVSUBSUPPFACLANT

FB10 NAVSTAPAC
FB13 SUBASEPAC
FB28 COMNAVABASEPAC
FB36 NAVFACPAC
FB45 TRIREFFACPAC
FB48 NAVSUPPFACPAC
FC1 FOCCEUR
FC3 COMNAVACTEUR

SNDL DISTRIBLTION (CONTINUED):

(1 Copy each):

FC5	NAVSUPACTEUR	FKP3A	NAVPRO
FC7	NAVSTAEUR	FXP5A	NAVSEACEN
FC12	NAVSUPPOEUR	FT1	CNET
FD1	COMNAVOCEANCOM	FT15	NAVU
FD4	OCEANCEN	FT20	NAVCONSTACEN
EF1	COMNAVDIST Washington, DC	FT24	FLETRACEN
FF3	NAVSTACNO	FT37	NAVSCOLCECOFF
FF18	NAVTAOSUPPACT	FT38	NAVSUBTRACENPAC
FF32	FLDSUPPACT	FT39	NAVTECHTRACEN
FF38	USNA	FT55	NAVSCSCOL
FF42	NAVPGSCOL	FT60	EDTRASUPPCEN
FH1	COMNAVMECOM	FT78	NAVEDTRAPRODDEVCE
FH3	NAVHOSP	FT85	TRITRAFAC
FKA1	SYSOMHQ	V2	MARBKS
FKN2	CBCs	V12	CG MCDEC
FKN3	OICCs	V14	HQBHQMC
FKN10	NAVSUPPFAC	V16	CGMCB (Less Oahu)
FKN11	NAVCIVENGRLAB	V17	MARCORCAMP
		V23	CGMCLB

(400 copies)

FKN1 EFD (Northdiv only)

Additional copies may be obtained from:

Commanding Officer
Northern Division
Naval Facilities Engineering Command
Philadelphia, PA 19112-5094
ATTN: Code 164

This page intentionally left blank

FOREWORD

This field manual contains information on materials, equipment, and procedures used to clean and seal cracks in asphalt cement concrete pavements.

Recommendations or suggestions for modification, or additional information and instruction that will improve the publication and motivate its use, are invited and should be forwarded to the Commander, Naval Facilities Engineering Command (Attention: Code 163), 200 Stovall Street, Alexandria, VA 22332-2300. Telephone: Commercial (202) 325 0045.

This publication has been reviewed and is approved for certification as an official publication of this Command in accordance with SECNAV Instruction 5600.16A.

for
C. D. SMITH

Deputy Assistant Commander for
Public Works Centers and Departments

This page intentionally left blank

ABSTRACT

This field manual contains information on materials, equipment, and procedures used to clean and seal cracks in asphalt cement concrete pavements.

No.	Title	Est. Compl. Date
MO-102	Maintenance and Repair of Surfaced Areas	09/90
MO-102.1	Asphalt Surfaced Roads & Parking Lots	04/89
MO- 102.2	Jointed Concrete Roads & Parking Lots	04/89
MO-102.3	Asphalt Surfaced Airfields	08/89
MO-102.4	Jointed Concrete Airfields	08/89
MO-102.5	Pavement Maintenance Management	08/90
MO-102.6	Asphalt Crack Repair	05/90
MO-102.7	Concrete Repair	12/90
MO-102.8	Asphalt Repair	12/91

This page intentionally left blank

TABLE OF CONTENTS

	P a g e
Purpose of Sealing..	1
When to Seal..	3
Specifications..	5
Material Uses..	7
Crack Preparation Equipment..	9
Crack Preparation Procedures..	17
Crack Sealing Equipment..	25
Crack Sealing Procedures..	29
Problem Areas..	37

This page intentionally left blank

PURPOSE OF SEALING

The purpose of sealing cracks in asphalt concrete pavements is to protect the pavement structure from premature failure. Unsealed cracks allow water intrusion and debris retention in the crack opening. Water intrusion in the cracks penetrates into the base and subbase materials creating the potential problem of a loss of strength in these materials. The weakened pavement structure can result in load-related failures such as alligator cracking (Photo 1). The debris retention can cause the pavement to “push up” at the edges of the crack when the pavement expands due to thermal changes. This decreases the rideability of the pavement surface. These failures and deficiencies increase the life-cycle cost of the pavements by requiring increased maintenance.

The use of proper crack preparation and sealing techniques can extend the effective life of the sealant, thereby increasing the life of the pavement and reducing maintenance costs.

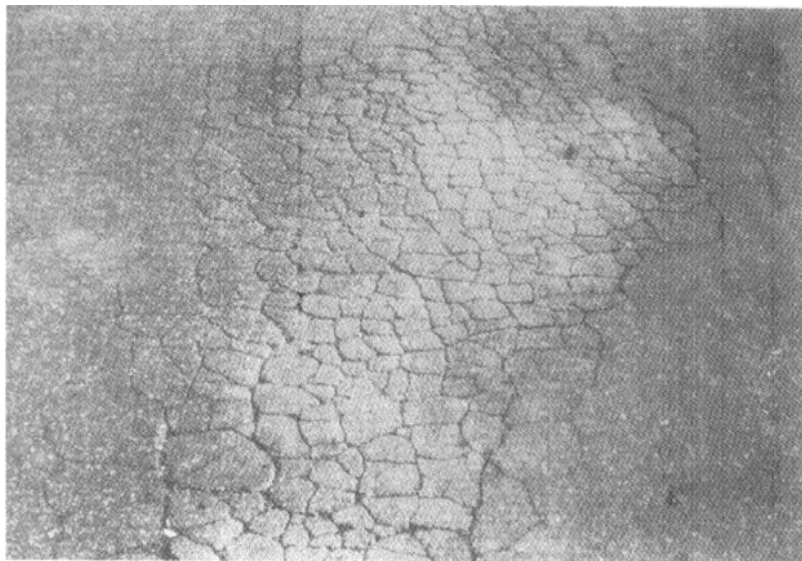


Photo 1. Example of alligator cracking

WHEN TO SEAL

Field evaluations should be conducted a minimum of twice a year--once during the summer months and once during the winter months. Seasonal evaluations will enable the determination of the number and size of cracks and will allow performance evaluations of any existing sealant when the cracks are at their smallest and largest width. Initial sealing should be considered after cracks have become approximately 1/4 inch wide. Cracks less than 1/4 inch wide should not be sealed unless they cover approximately 80 percent or more of the pavement. Pavements that have 80 percent or more of the area covered by cracks that are 1/4 inch wide or smaller should be sealed using some type of surface treatment (such as a slurry seal), an overlay, or a pavement recycling method instead of applying a sealant.

Crack sealing should be planned and scheduled as determined by field evaluations. Spot repairs should be made to sealed cracks where the sealant material has failed. Photos 2 and 3 show typical areas in need of sealing. Major resealing projects should be considered for areas where more than 85 percent of the sealant has failed.

Crack sealing projects should be scheduled during the normal construction season. A normally low rainfall period in the spring or fall is preferred. The temperature of the pavement should be 50°F and rising, and the crack should be free of moisture and debris before sealing is allowed.



Photo 2. Example of reflective cracking



Photo 3. Example of longitudinal cracking

SPECIFICATIONS

The specifications used to test asphalt crack sealants are as follows:

Federal Specifications (Fed. Spec.)
SS-S-1401C

Sealant, Joint, Non-Jet-Fuel Resistant,
Hot-Applied, for Portland Cement and
Asphalt Concrete Pavements

State Department of Transportation (DOT) or local municipality specifications may be used for asphalt rubber and asphalt plus fiber sealants (see MATERIAL USES).

This page intentionally left blank

MATERIAL USES

Crack sealants conforming to Fed. Spec. SS-S-1401C or ASTM D 3405 can be used to seal cracks in asphalt pavements.

Rubberized asphalt sealants that are not covered by the above specifications can be used only when an appropriate State DOT or local municipality material specification is available and after the sealant has been approved by the Public Works Officer. The DOT and local specifications will often be modified to account for the temperature variations of the region. Asphalt cements that contain synthetic fibers have been used successfully on a limited basis as a crack sealant. State or municipality specifications should also be used for these materials.

The crack sealant material should be tested by a government-approved independent laboratory for specification conformance before it is used on a project. If the quantity of sealant involved for the project is less than 500 pounds, then the manufacturer's certificate of compliance may be accepted in place of testing. The evaluation of local field performance data from past sealing projects is often helpful in determining which type of sealant should be used to seal the cracks.

The backer rod (Photo 20) is a compressible, nonshrinking, nonabsorptive material whose melting point should be higher than the pouring temperature of the sealant.

This page intentionally left blank

CRACK PREPARATION EQUIPMENT

The equipment used to prepare a crack for sealing will depend on the size of the crack being prepared. Equipment used to prepare a crack will be discussed in this section and the procedures for using the equipment will be discussed in section CRACK PREPARATION PROCEDURES.

All crack preparation equipment should be inspected before and during actual construction. Inspection will determine if the equipment is being properly maintained, if all of the required safety devices are present, if the equipment is damaging the pavement, and if the equipment is being operated in a correct and safe manner.

Crack preparation equipment includes the following:

a. **Router.** A router is used to create a sealant reservoir by enlarging meandering cracks to the desired depth and width. A vertical spindle router with a diamond bit (Photo 4) is recommended to minimize damage to the asphalt pavement; however, an impact router (Photos 5 and 6) may be used *if* it is equipped with carbide tipped vertical sided bits. Impact routers that are not equipped with carbide tipped bits or those equipped with “V” shaped bits should not be used because they tend to chip and damage the asphalt pavement. When using a vertical spindle router, the router bit should be belt-driven to help prevent injury to the operator and damage to the pavement if the bit jams in the crack. If damage to the pavement is observed, work should be discontinued until corrective action is taken. Such corrective action may require replacing worn router bits, changing operators, or replacing the equipment completely.

b. **Concrete Saw.** A concrete saw with a water-cooled diamond blade or abrasive disk can be used to widen straight cracks to the desired width and depth. Concrete saws may be used in place of a router if the blade has a diameter of 6 inches or less (Photo 7). The 6-inch diameter blade allows the saw to follow slightly meandering cracks; however, a saw blade does not follow the meandering crack as well as a router. If a saw is used to widen the crack, a high pressure water stream can be used to remove the debris created by the saw (Photo 8).

c. **Hot compressed-air (HCA) heat lance.** The HCA heat lance (Photo 9) is used to warm, dry, and clean the crack when the sealing operation must be conducted in less than desirable conditions. Such conditions would be following rain or when the pavement temperature is below 50°F. The heat lance can also be used to remove small amounts of vegetation from cracks. Heat lances are capable of producing heated air at 3,000°F at velocities of up to 3,000 feet per second; therefore, extreme care must be used by the operator, and the heat lance should not remain stationary over on spot but should be kept moving to ensure that the asphalt pavement is not overheated. Overheating will cause the pavement to become charred and brittle resulting in premature sealant bond failure. Heating the cracks using direct flame methods should not be permitted. Direct flames harden the asphalt and leave a sooty residue that prevents adequate bonding of the sealant to the asphalt pavement.

d. **Sandblasting equipment.** Sandblasting equipment (Photo 10) is used to remove residue left by the saw, loosened aggregate left by the router, vegetation, and other foreign debris. If the debris is left in the crack, the sealant will not bond adequately to the asphalt causing premature failure. Equipment for sandblasting consists of an air compressor, hoses, and a venturi-type nozzle with an opening not to exceed 1/4 inch. The air compressor should be equipped with traps that will maintain the compressed air free of oil and moisture. The compressor should be capable of supplying air at 150 cubic feet per second and maintaining a line pressure of 90 pounds per square inch. Caution should be exercised to prevent overblasting the crack. It is important to remove all debris from the crack, but overblasting could cause the pavement to ravel or create voids in the crack face.

e. **Wire brushes.** Wire brushes (Photo 11) are helpful in removing debris and vegetation from shallow cracks, but they do not easily remove debris, such as saw residue, from the walls of the cracks. Debris on the crack faces will cause the sealant to lose adhesion with the pavement and prematurely fail. Worn brushes should not be used to clean the cracks because they will not effectively remove residual debris. Care should also be taken when wire brushes are used to clean cracks that have been sealed before. The brushes will have a tendency to smear the old sealant residue on the crack wall instead of removing it.

f. **Hand tools.** When approved by the Contracting Officer, hand tools may be used for repairing or cleaning cracks or removing old crack sealant. The tools should be examined to ensure that they will not damage the pavement in any manner when properly used.

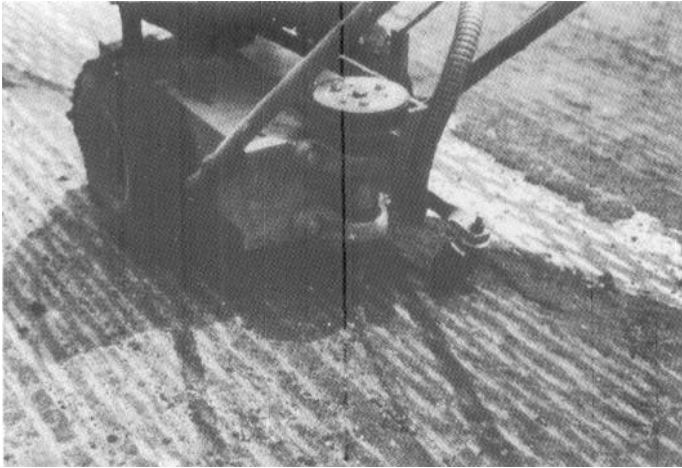


Photo 4. Vertical spindle router

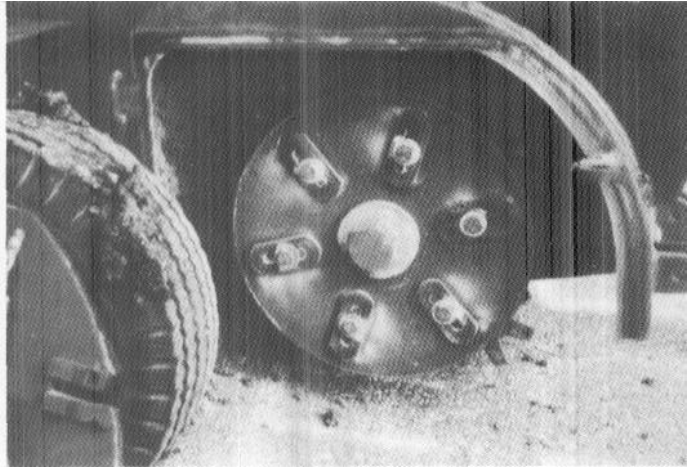


Photo 5. Rotary impact router

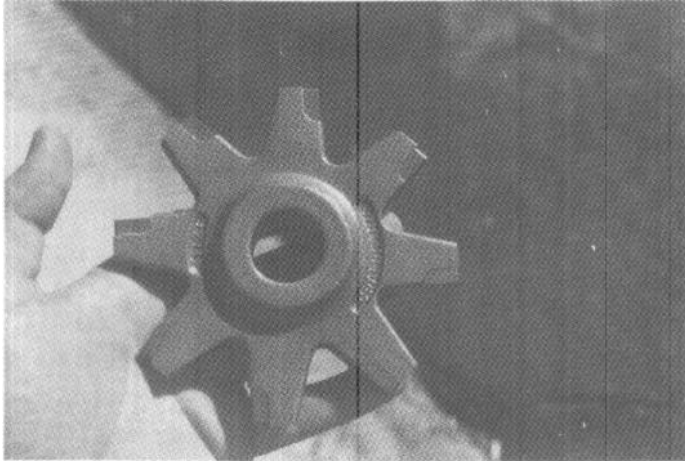


Photo 6. Carbide tipped rotary impact router bit



Photo 7. Concrete saw with a 6-in.-diameter blade



Photo 8. High pressure water cleaning equipment



Photo 9. Hot compressed-air heat lance

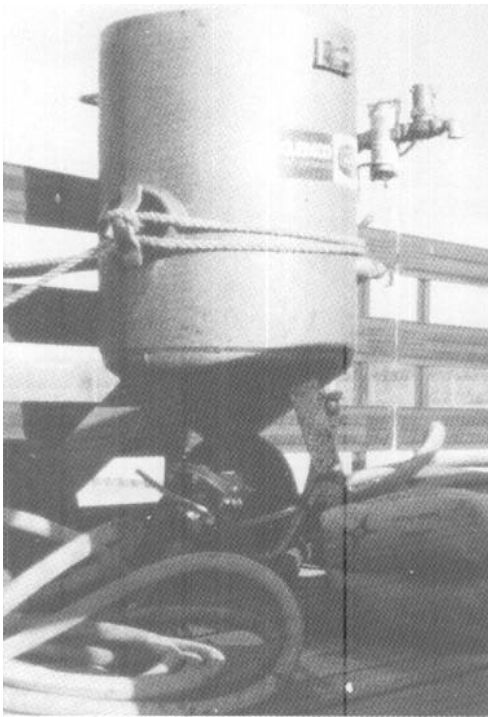


Photo 10. Sandblasting equipment

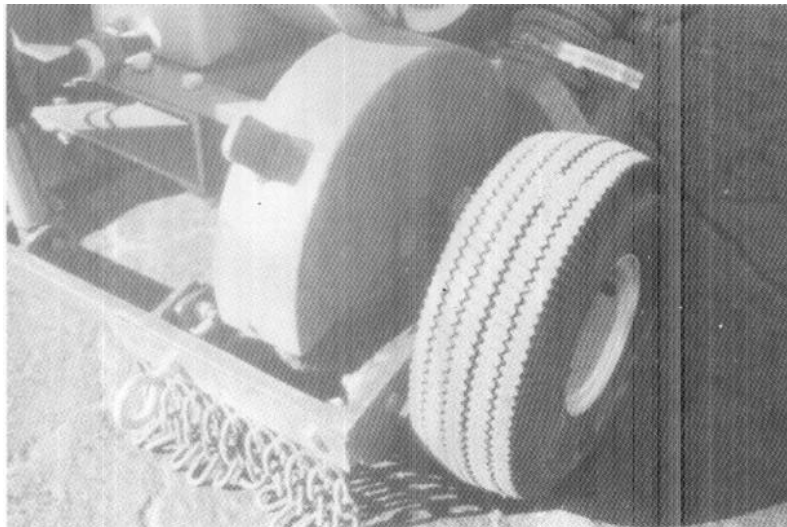


Photo 11. Wire brush equipment

This page intentionally left blank

CRACK PREPARATION PROCEDURES

Crack preparation procedures depend on crack size. The following information should be used as a guide when preparing cracks for sealing.

- a. Hairline cracks (less than 1/4 inch). Hairline cracks (Photo 12) require no preparation (see CRACK SEALING PROCEDURES),
- b. Small cracks (1/4 to 3/4 inch). Small cracks (Photo 13) should be widened to a nominal width of 1/8 inch greater than the existing nominal or average width. Widening the cracks 1/8 inch will help eliminate the potential for raveling of the pavement along the edges of the crack and will provide a sealant reservoir that has vertical faces. The depth of the routed crack should be approximately 3/4 inch. A backer rod material (see CRACK SEALING PROCEDURES) should be placed in cracks that have a depth greater than 3/4 inch. Backer rod materials are not required in cracks that are 3/4 inch deep.
- c. Medium cracks (3/4 to 2 inches). Cracks that are 3/4 to 2 inches (Photo 14) shall be prepared by simply cleaning the crack using a sandblaster, HCA heat lance, or wire brushes, and then cleaning with compressed air. The same procedures and precautions should be used with the cleaning equipment as previously stated in paragraph Small Cracks. The crack must be inspected to ensure that it is clean and dry.
- d. Large cracks (greater than 2 inches). Cracks wider than 2 inches (Photo 15) should be prepared in the same manner as potholes. A saw should be used to cut away damaged pavement and to provide vertical faces. The area should then be cleaned and filled instead of sealed (see Section CRACK SEALING PROCEDURES).

e. Cracks in pavements that are to be overlaid. Cracks larger than 1/4 inch in pavements that are to be overlaid can be prepared by cleaning with the sandblaster, HCA heat lance, or wire brushes, and then cleaned with compressed air. Some specifications do not require the sealing of cracks in pavements that are to be overlaid; instead, the cracks are sealed when they reflect the overlay and therefore require only air cleaning. Large cracks should be prepared as described above.

Meandering cracks should be widened using a router; whereas, the straighter cracks can be widened using a saw with a small diameter blade. When a saw is used, the crack should be cleaned with a high pressure water stream or a sandblaster to remove debris created by the saw. The recommended procedure is to use a router since water would not be required. When resealing, it is important to remove all of the old sealant that is in the crack. After the crack has been widened or the existing sealant has been removed, the crack should be cleaned to prevent any debris from contaminating the crack.

Cleaning of the crack can be accomplished by using the sandblasting equipment, the HCA heat lance, or wire brushes. When the sandblasting equipment is used, a technique that enables both faces of the crack to be sandblasted should be established. A multiple-pass technique should be used which consists of positioning the sandblaster nozzle approximately 1 inch above the pavement surface and directing it at one of the crack faces and then the other. After the entire length of one crack face is sandblasted, the opposite face is sandblasted. Approximately 1 inch of the pavement surface on both sides of the crack should also be sandblasted to remove debris. The cracks should not be overblasted. Overblasting can damage the pavement causing raveling and premature bond failure of the sealant.

The HCA heat lance should only be used when the pavement is wet and/or cold (pavement temperature below 50°F). Extreme care should be used to ensure the crack faces do not become overheated or burned. Overheating of the crack faces can greatly reduce the life expectancy of the sealant and adjacent pavement. The expected failures may be in the form of adhesion failure of the sealant or additional cracking of the pavement between the area that was overheated and the remainder of the pavement. The problem of overheating the pavement becomes more of a possibility if the pavement is already warm and dry.

Wire brushes are commonly used during sealing projects; however, wire brushes are not always capable of removing debris from the crack faces, and this debris can cause adhesion failures. Careful inspections should be conducted to ensure the wire brushes are not worn and all debris and dust have been removed.

The recommended procedure to remove debris from the crack is to rout the crack. This method normally removes the debris more effectively with less chance of pavement damage. The rotary impact router equipped with carbide tipped bits is generally faster than the spindle router. The precautions mentioned previously should always be observed.

Once the old sealant and debris have been removed from the crack, the crack is cleaned with compressed air. The compressed air is blown into the crack to remove sand or any debris that was loosened during the initial cleaning. The compressed air also aids in the removal of moisture.

Inspection is the final phase of crack preparation. The crack must be inspected for cleanliness and dryness. It is essential for the crack to be clean and dry so that the sealant will adhere to the pavement. One method to check for cleanliness is to rub ones finger along the crack face. If a dusty residue is left on the finger, the crack should be recleaned. If there is no residue, the crack is ready for sealing.

Summary. The cleanliness of the crack is one of the most important factors in crack preparation that affects the life of the sealant. It is not the only important factor, but it is one that can be controlled. After the crack has been inspected and approved for cleanliness, the crack is ready to be sealed (Photo 16).

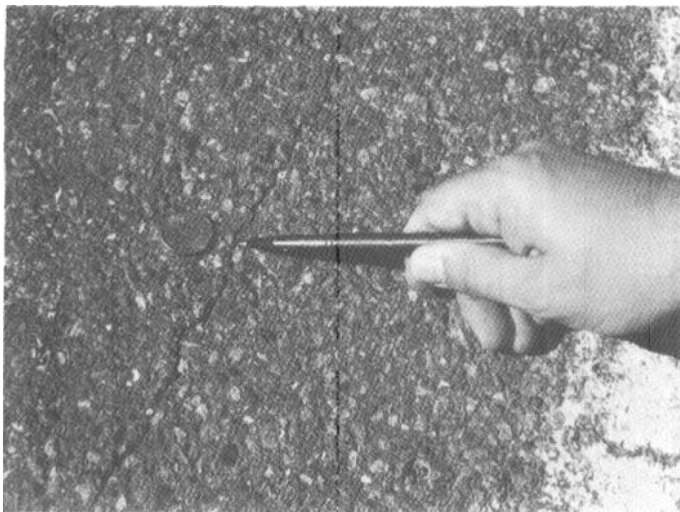


Photo 12. Example of hairline-sized cracks

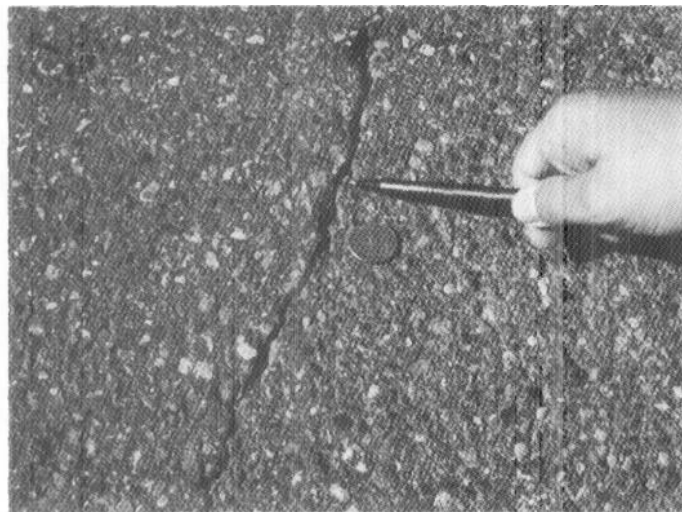


Photo 13. Example of a small-sized crack

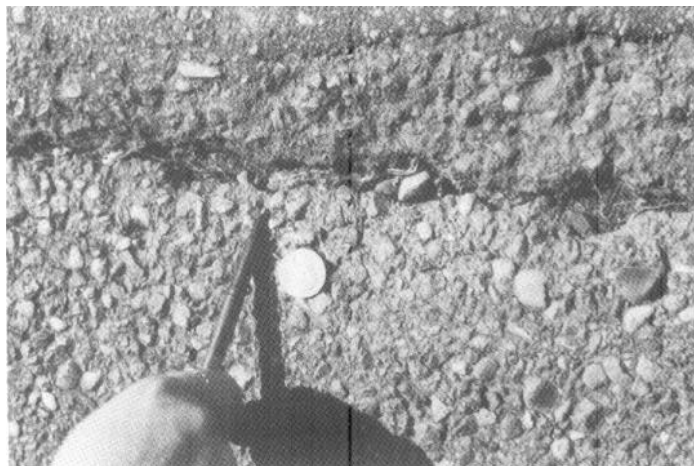


Photo 14. Example of a medium-sized crack



Photo 15. Example of large-sized cracks

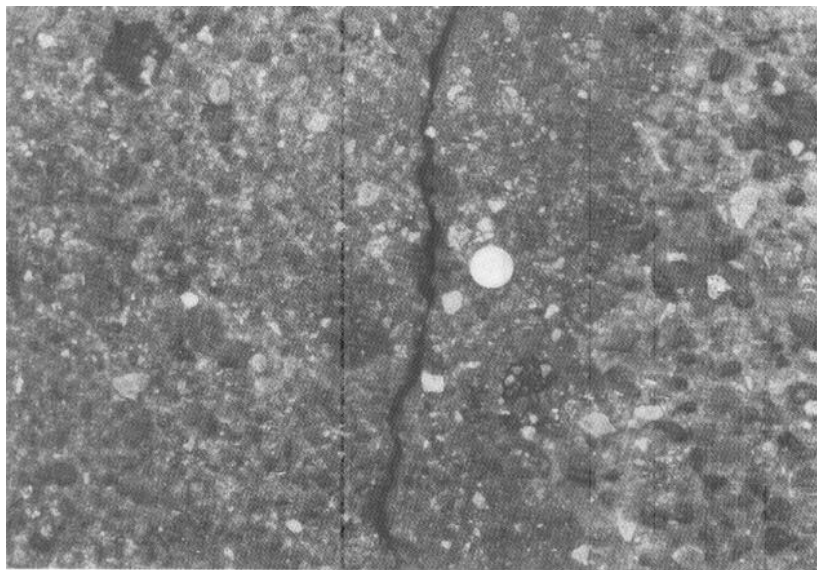


Photo 16. Crack after cleaning

This page intentionally left blank

CRACK SEALING EQUIPMENT

At the present time, most asphalt pavement crack sealants are hot-applied. If a cold-applied sealant is used, the equipment requirements should be obtained from the sealant manufacturer. Some of the items of equipment used when sealing cracks with a hot-applied sealant are described below:

a. Hot-applied sealant applicator (melter). The equipment used to heat and install the hot-applied sealant (Photo 17) should consist of a double-boiler, agitator-type kettle. The heat transfer medium in the outer space should be an oil with a high flash point. The double-boiler helps eliminate hot spots in the heating kettle and the agitator provides mixing for uniform heating of the sealant. A direct heating kettle should never be allowed. The sealant should be transferred from the kettle to the crack by means of a direct-connected pressure-type extruding device (hose) with a nozzle that will insert into the crack. The equipment should be designed to allow the sealant to be circulated back into the inner kettle when sealing is not being performed. Positive temperature devices are used to control the temperature of the oil bath and measure the temperature of the sealant. Recording-type thermometers are useful for keeping track of the temperature of the sealant in the kettle as work progresses. Recording-type thermometers are not normally installed on the equipment at the manufacturer, but can be installed by the Contractor. The thermometers should be positioned so that they are easily read. Photo 18 shows the normal type of thermometers used on the meter.

b. Handtools. Due to the meandering nature of cracks, handtools are required to insert the backer rod materials in cracks that are deeper than 3/4 inch. These tools should not twist, cut, or damage the backer rod material.

Pouring pots or gravity-fed sealant applicators are not recommended for sealing cracks. These applicators have a tendency to trap air in the sealant as it is applied into the crack creating voids in the sealant. When spot repairs are made to cracks that have been sealed, it may not be feasible to use the hot-applied sealant applicator as described above and pour pots may be used. The pour pot should be equipped with a nozzle that will fit inside the crack in the same manner as the nozzle of the hot-applied sealant applicator.



Photo 17. Hot-applied sealant application equipment

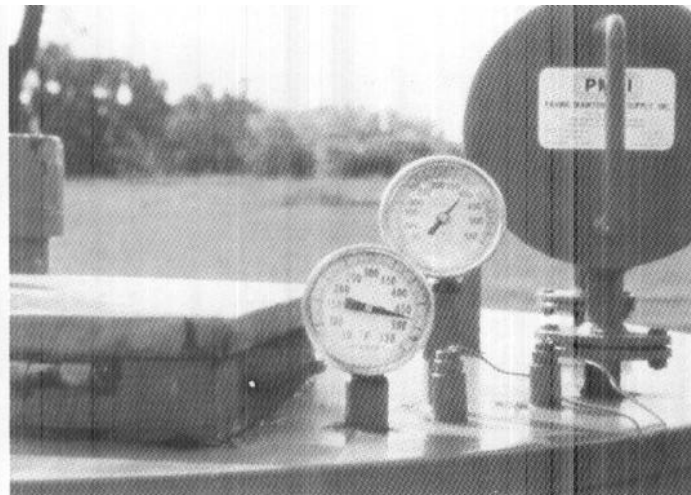


Photo 18. Thermometers measuring sealant and oil bath temperature

This page intentionally left blank

CRACK SEALING PROCEDURES

Procedures for sealing will vary depending upon the size of the crack. The following should be used as a guide.

a. Hairline cracks (less than 1/4 inch). It is very difficult to successfully insert sealant material into a crack that is less than 1/4 inch. Normally, these cracks are not sealed unless they cover 80 percent or more of the pavement area. If the cracks do require sealing, a surface treatment could be the most effective method. The surface treatment used will depend upon the area being treated and the predicted future traffic. A single or double bituminous surface treatment could be satisfactory for a roadway or parking lot, but not for an airfield.. Surface treatments and slurry seals will not be used for airfields that will encounter jet and high tire pressure aircraft because the surface treatment or slurry seal will normally deteriorate quickly. Options such as an asphalt overlay or pavement recycling should be considered for airfield pavements. For additional information on various types of surface treatments, see Department of the Navy, NFGS-02543, NFGS-02555, NFGS-02576; Department of the Army, Corps of Engineers CEGS-02555; or Departments of the Army and Air Force TM 5-822-8/AFM 88-6, Chapter 9.

b. Small and medium cracks (1/4 to 2 inches). After the crack has been cleaned and inspected, it is ready for sealing. The depth of the cracks to be sealed is determined and, if the depth is greater than 3/4 inch, a backer rod material is inserted. If the depth of the crack is not deep enough to accommodate the backer rod and maintain a sealant depth of 1/2 to 3/4 inch, then the crack can be routed or the backer rod material omitted.

c. Large cracks (greater than 2 inches). Cracks that are 2 inches and larger should be filled with an asphalt sand or fine-graded asphalt mix. The procedures and equipment used are identical to those used to repair potholes. The cracks should be squared by sawing, filled with the asphalt mix, and compacted. To obtain a high quality patch, the edges should be vertical and the crack must be clean. The asphalt material could prematurely fail if the proper cleaning and patching procedures are not followed. Additional information on these procedures may be obtained from Departments of the Army, Navy, and Air Force TM 5-624/NAVFAC MO-102/AFR 85-8 and Department of the Army TM 5-337.

d. Cracks in pavements that are to be overlaid. Small and medium cracks in pavements that are to be overlaid can be filled with an emulsion, a sand emulsion mixture (Photo 19), or one of the types of sealants previously mentioned. The material should be recessed in the crack a minimum of 1/4 inch to prevent the material from “bleeding” through the overlay. Bleeding occurs when the asphalt cement in the crack sealant material is drawn to the surface of the overlay. Bleeding causes the pavement above the crack to become soft, and a crack in the overlay is usually the end result.

The backer rod (Photo 20) is a compressible, nonshrinking, nonabsorptive material whose melting point should be higher than the pouring temperature of the sealant. The backer rod should be approximately 25 percent wider in diameter than the nominal width of the crack. The larger size will enable the sealant to be inserted without dislodging the backer rod. The backer rod should be placed to a depth that will provide a shape factor (depth to width ratio) of approximately 1. However, the maximum depth that the backer rod should be placed is approximately 3/4 inch. This will provide a reservoir for the sealant that will maintain the internal stresses in the sealant at a minimum. High internal stresses can create cohesion failure, a splitting of the material, or dislodge loose aggregate from the pavement damaging the effectiveness of the seal. However, if the shape factor is too small, adhesion failure can occur; therefore, it is important to maintain the proper shape factor. An acceptable shape factor is anything between 1 and 2 (depth to width).

The cracks should be inspected immediately prior to sealing. This will ensure that the backer rod is at the specified depth and that debris has not been blown back into the crack. Clean cracks are essential in obtaining adhesion between the sealant and the crack face.

The temperature of the sealant should be checked to make sure that it is at the manufacturer's recommended application temperature. The nozzle of the application equipment is inserted into the crack allowing the crack to be sealed from the bottom to the top (Photo 21). Sealing in this manner minimizes bubbling of the sealant due to entrapped air. The sealant should be recessed approximately 1/8 to 1/4 inch below the pavement surface to prevent tracking. A squeegee may be used to remove excess sealant from the pavement surface when a crack is overfilled (Photo 22).

Any cracks that are not sealed the same day they are prepared should be blown out with compressed air before the sealing operation continues. If rain delays the sealing operation, the cracks should be allowed to dry and may require additional cleaning to remove any debris that may have washed into the crack by rain. This debris can be effectively removed by the sandblaster, wire brushes, or HCA heat lance, but not by using only compressed air cleaning.

After the cracks have been sealed (Photo 23), they should be inspected to ensure the sealant is bonding to the pavement and that the cracks were not overfilled. Overfilled material can track onto the pavement surface and/or stick to pedestrian's shoes. The sealant should also be inspected to ensure the proper sealant recess has been obtained. Sealants that have not been recessed may be pushed above the pavement surface as the pavement expands and becomes damaged by traffic. Cracks that have been underfilled can have additional crack sealant applied.

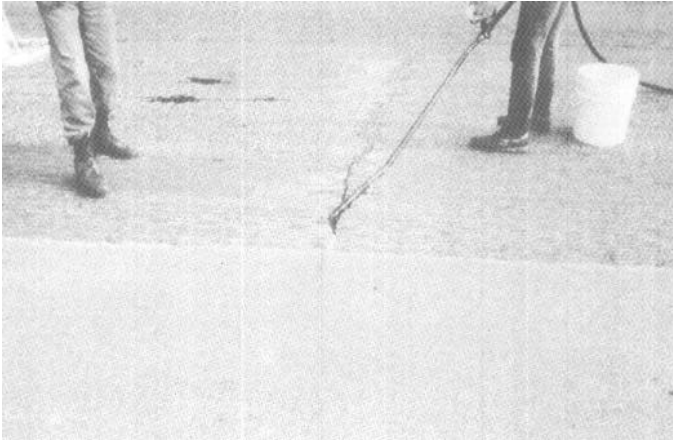


Photo 19. Filling crack with sand emulsion mixture

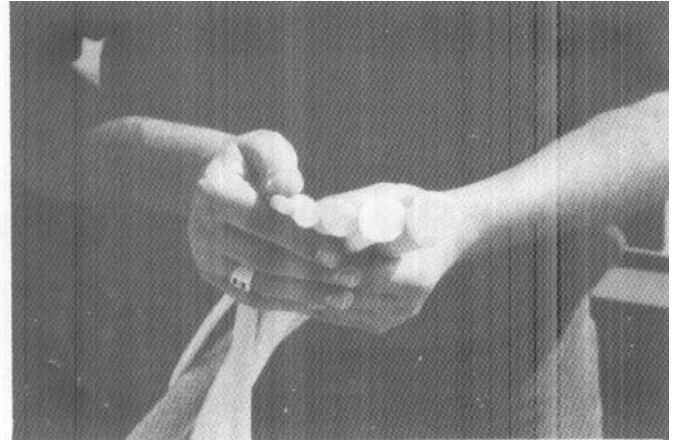


Photo 20. Examples of backer rod materials



Photo 21. Sealing the crack

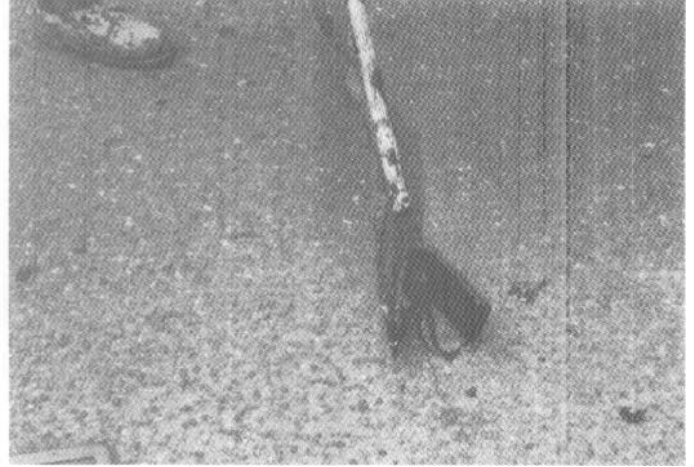


Photo 22. Using a squeegee to remove excess sealant

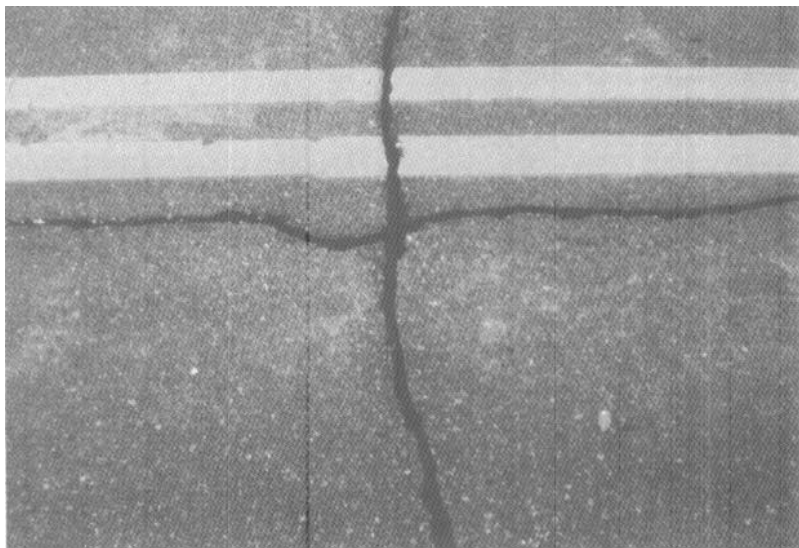


Photo 23. A crack after sealing

This page intentionally left blank

PROBLEM AREAS

Many problems that arise during a sealing project can be divided into three categories--crack sealant materials, crack preparation, and crack sealant application.

Materials. One of the main problems associated with the sealant materials is nonconformance to the required specification. This problem can be minimized by having the sealant tested by an independent laboratory. Another problem is a combination between materials and application which involves the sealant not setting up or curing once it has been applied to the crack. This problem is often caused by overheating the sealant before it is applied to the crack. The overheating can be caused by heating the sealant at too high of a temperature or heating it at the recommended pouring temperature for an extended period of time. Most sealants used to seal cracks in asphalt concrete pavements are asphalt cement based materials and overheating causes the light volatiles to “cook off” or evaporate causing the sealant to become brittle and causing premature failure of the sealant. This problem can be solved by monitoring the temperature of the sealant in the application equipment and discarding any material that has been heated for longer than 4 hours. It is also recommended that the sealant remaining in the equipment be discarded and the equipment thoroughly cleaned after each day’s work has been completed.

Preparation. The main problem associated with crack preparation is the cleanliness of the crack. The crack sealant will not adequately bond to the pavement if there is dust, debris, or loose aggregate remaining in the crack. Damaging the pavement during the routing process can also be a problem. Care must be used by the equipment operator so that each crack is followed and the speed of the router is controlled to prevent the router from jamming in the crack. Careful quality control and inspection can minimize these problems.

a. Checking for dust and debris in the crack is a relatively simple procedure; rub one's finger along the crack and if the finger gets dusty, the crack is dirty. Checking for moisture is more of a judgment decision. There is no test for checking the moisture of a crack except by observation or feeling with one's hand. It is important that the crack is dry at the time of sealant application so that the sealant will bond to the pavement.

b. The last problem dealing with crack preparation is deciding which method to use. This is a problem because most cracks are not uniform in size and the surrounding pavement will have varying degrees of deterioration. Decisions must be made as work progresses. The main consideration for crack preparation is to clean the crack without damaging the surrounding pavement.

Application. There are two major problems associated with crack sealant application. The first problem, brittleness of the sealant material due to overheating or prolonged heating, was discussed in the above materials paragraph. Brittleness is a materials problem because some sealant materials are more susceptible to overheating than other sealants, but it is also an application problem because it can be corrected by implementing a good quality control program. The second problem is overfilling the crack. The sealant can be tracked onto the pavement and abraded if the crack is overfilled. Quality control measures and inspection can reduce the overfilling of cracks. A squeegee or similar object can be used to remove areas of excess sealant.